

KAB 61-K1 MECHANICAL SUSPENSION SEAT

Adjustable Headrest

Upward & downward height control.
Forward & backward tilt control.

Seat Cushion Tilt Lever

Lift lever to adjust the tilt of your seat cushion. 3 increments available.

Suspension Isolator Lever

Horizontal vibration dampener.
Lift to engage. Lower to disengage.

Ride Height Indicator

Bounce up and down to confirm suspension ride height is operating in green zone. Red zone indicates that suspension is not set at optimum ride level. Re-adjust using height adjustment lever.

Height Adjustment Lever

To increase or decrease the ride height of your seat. Twist handle to show "+" or "-" then rotate to ratchet.



Always Ensure Vehicle is Stationery Before Adjusting

Heater Switch

On/Off option (if connected).

Lumbar Support Knob

To adjust the lumbar support in your backrest. Rotate knob to suit.

Backrest Adjustment Lever

Lift lever to adjust angle of backrest.

Seat Cushion Slide Lever

To adjust the length of your seat cushion, lift lever and slide forward or backward.

Slide Rail Handle

To move your seat closer to or further away from the vehicle controls. Lift and slide forward or backward.

1300 130 522

KAB//Seating

www.kabseating.com.au